


### Diagonal Measurements

The diagonal measurements must be the same in order to keep base square.

Timber Bearers

Concrete Strips

NOTE:  
DIAGRAM DOESN'T  
INCLUDE VERANDA  
DOORS OPEN OUTWARDS  
AT FRONT OF CABIN.

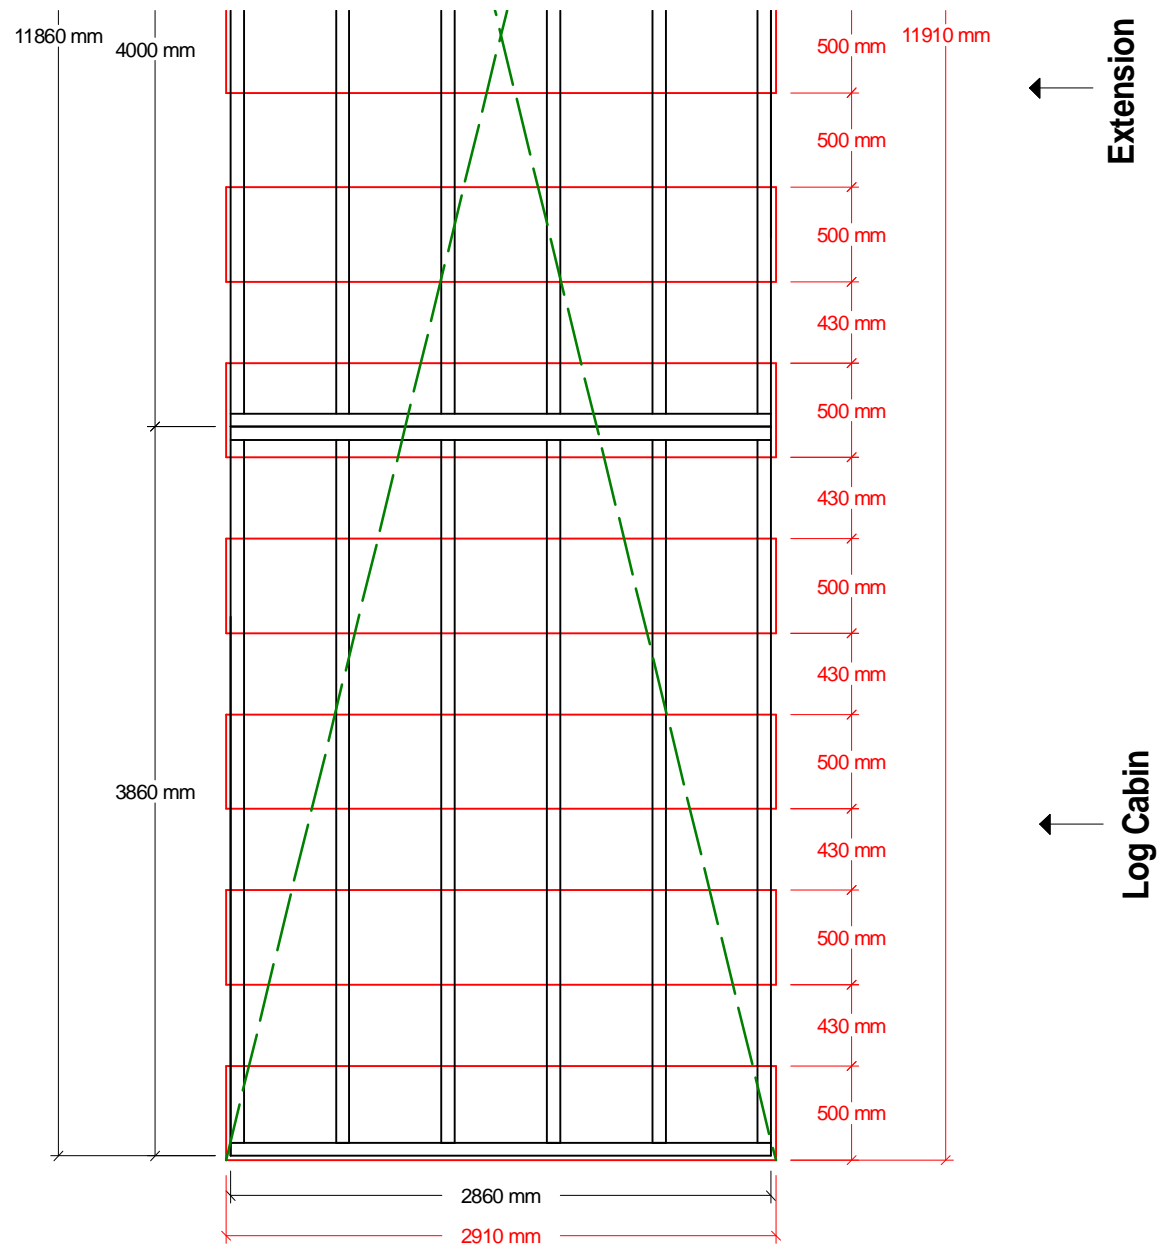

If you wish to put your extension from other side of cabin, please reverse this plan.


**FRONT OF LOG CABIN**

# AVON 3m x 12m Grande XL - BASE + BEARERS

## OVERALL MINIMUM BASE DIMENSION - 2910 x 11910mm

(ALLOWING A MINIMUM 25 MM AROUND LOG CABIN BASE)

### BACK OF LOG CABIN

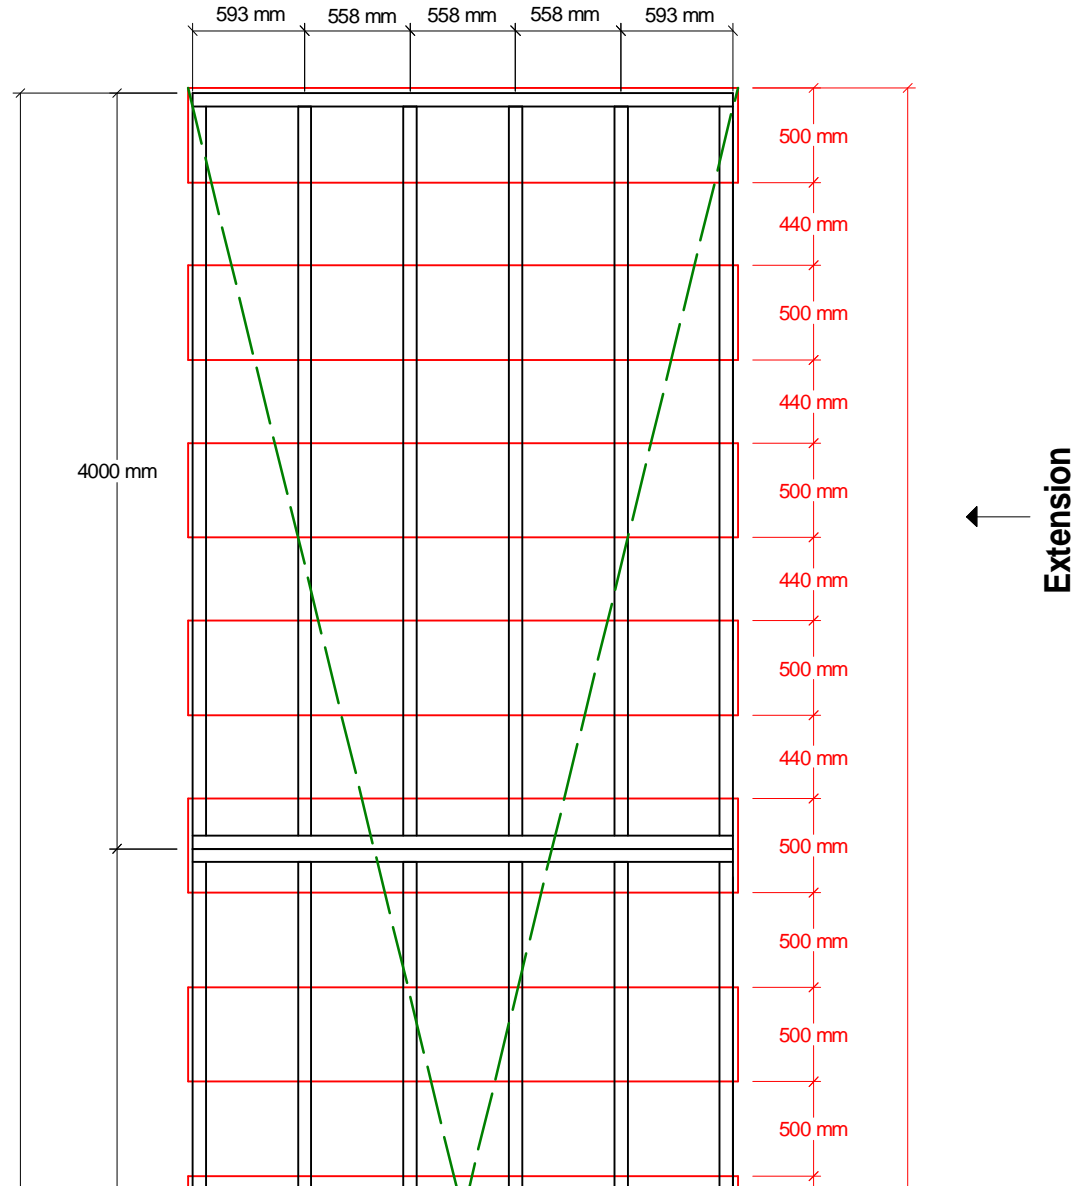


# AVON Veranda 3m x 1.5m - BASE + BEARERS

## OVERALL MINIMUM BASE DIMENSION - 2910 x 1500mm

(ALLOWING A MINIMUM 25 MM AROUND VERANDA)

These bearers should butt up against the bearers on your cabin

### BACK OF VERANDA

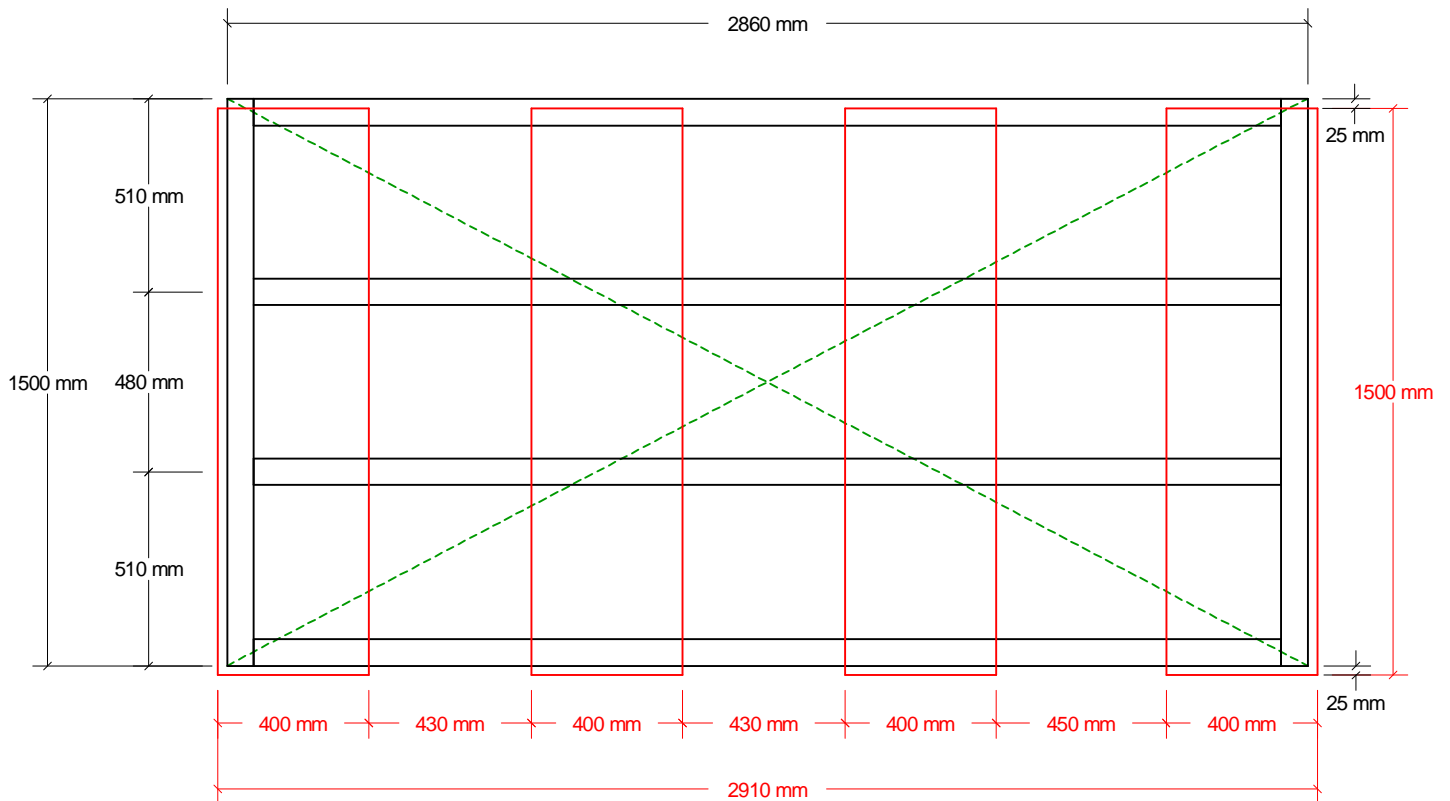

### FRONT OF VERANDA

**Diagonal Measurements**

The diagonal measurements must be the same in order to keep base square.

**Concrete Strips**

**Timber Bearers**